



10.1.2 Replacing of sealings (cylinder cover)

Step 6

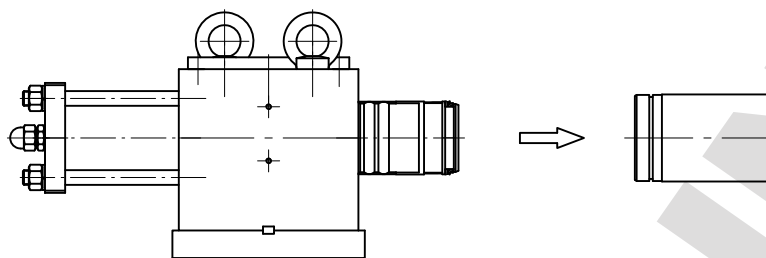

Dismount the cylinder.

Step 7

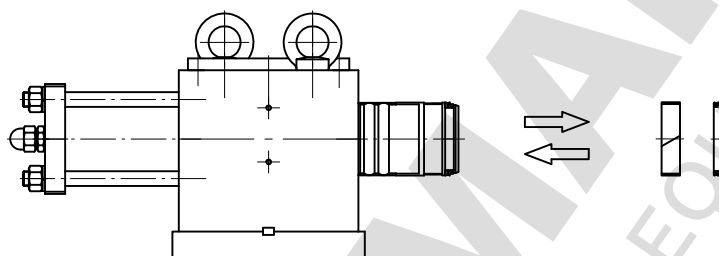

Change the piston guide ring and the piston ring


Note: the groove of the piston ring shows to the end of the piston.

Step 8



Change the o-rings of the cover, the hydraulic pipe and the cylinder.

Step 9

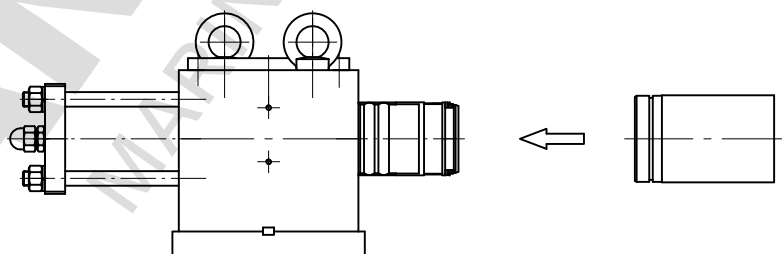

Mount the cylinder back on the actuator.

Note: hold the guide ring tightly around the piston while mounting the cylinder